

Portable WinAVR is based on the regular WinAVR suite of software development tools for the Atmel AVR microprocessor series and is preconfigured to run directly from any removable medium (e.g. USB memory stick) without prior installation.

Take your favorite AVR development environment to any PC with free USB port, take it to the lab's PC, where normally no WinAVR is installed, take it to a customer and perform software corrections in the field, evaluate a new WinAVR version prior to installing it permanently... etc.

Availability

Portable WinAVR is available as

- Ready-to-run USB memory stick with preloaded Portable WinAVR and sample projects
- Full ZIP archive with Portable WinAVR distribution (including WinAVR, supplementary files and samples projects)
- optional: ZIP archive with sample projects

Quick Start Guide

More detailed information on the Portable WinAVR distribution, package content, supplementary files and getting started is available here:

[Quick Start Guide zur Portable WinAVR Distribution.](#)

<http://www.chip45.com/PortableWinAVR>